

Istruzioni di montaggio
Assembly Instructions
Montageanleitungen
Instructions de montage
Instrucciones de montaje

05.2025

Offset < L240	p 3
Offset > L240	p 6
Alluminium top	p 11



Offset

Kit ferramenta
Hardware kit
Hardware-kit
Kit de matériel
Kit de hardware

A



M8X61

G



Left side cap X2

B



M8X37

H



Right side cap X2

C



M8X25

I



Felt X4
indoor use

D



M8X10

L



Rubber
grommet X4
outdoor use

E



EX X1

M



Bracket X4

F



Adhesive
rubber
grommet X20

N



M5X6 (x8)


Offset

Tables < L240

1


A

A


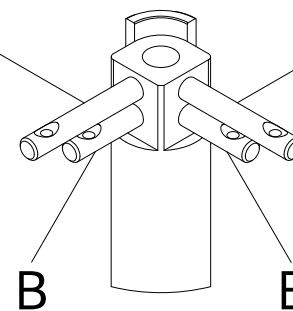


B

B

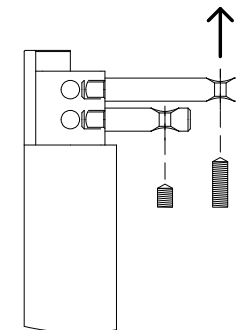


2

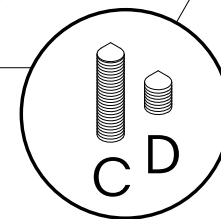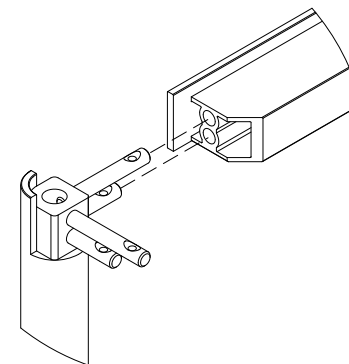


C

D

3

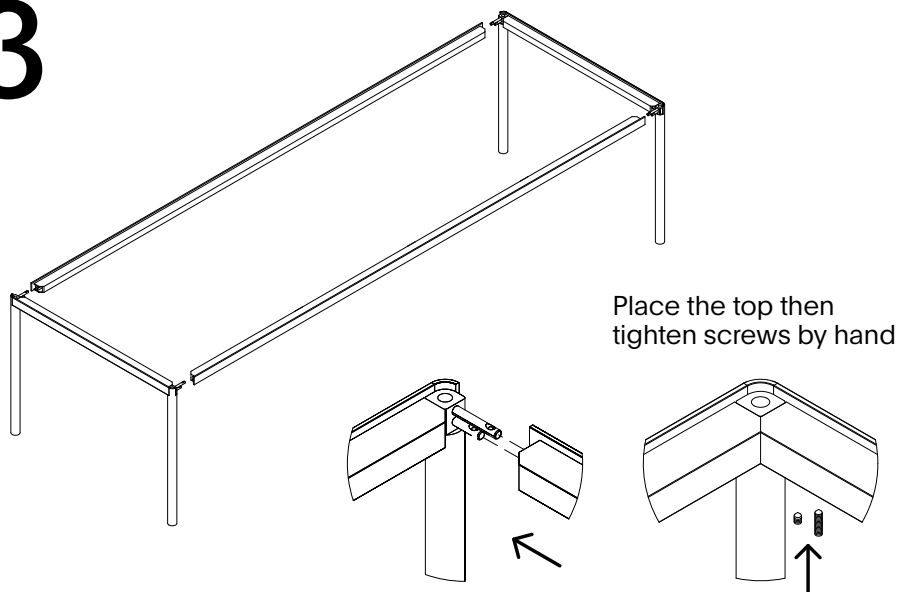


4

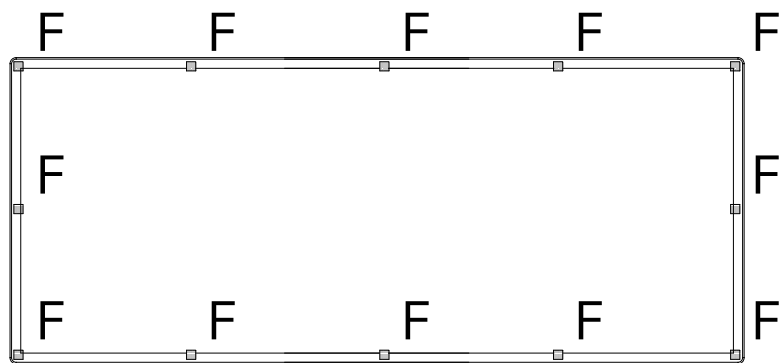


Place the rubber grommets along the whole perimeter of the frame.

5

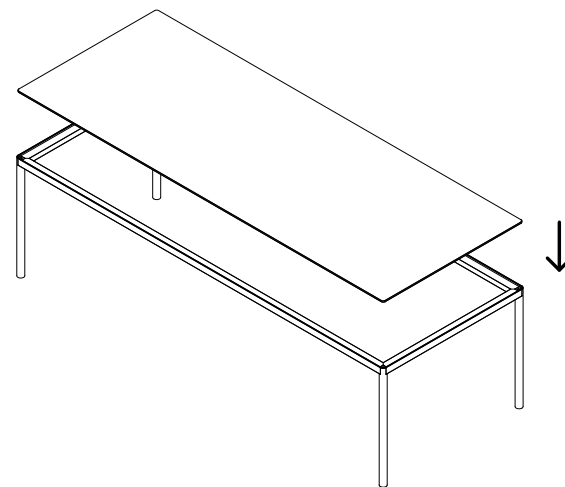


6

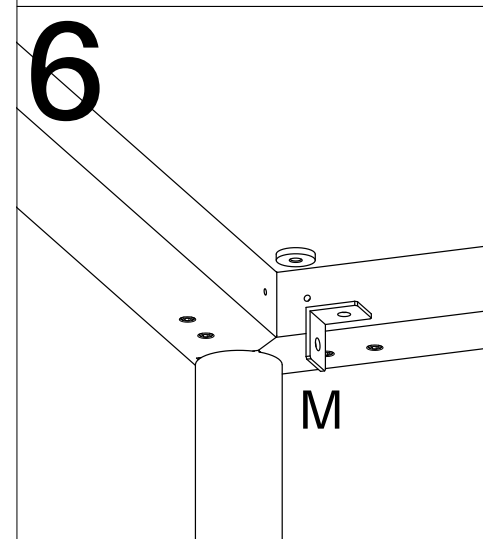


Place the bracket.

7

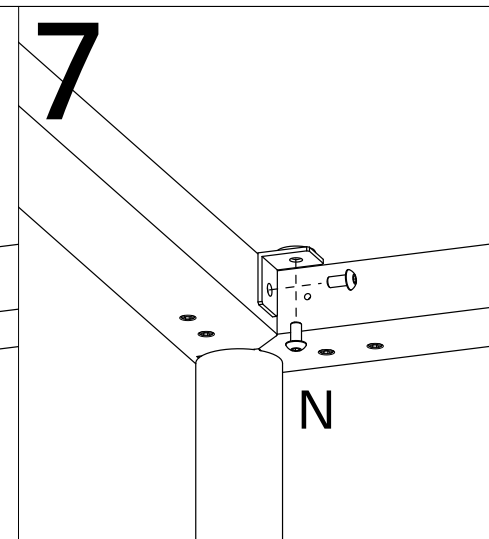


Fix it with M5×6 screws.


1

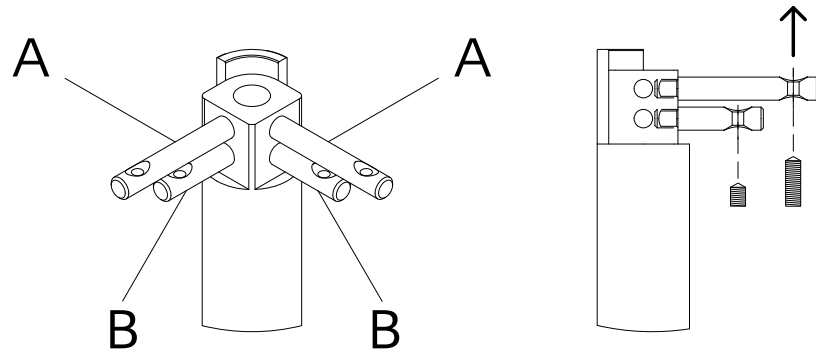


2

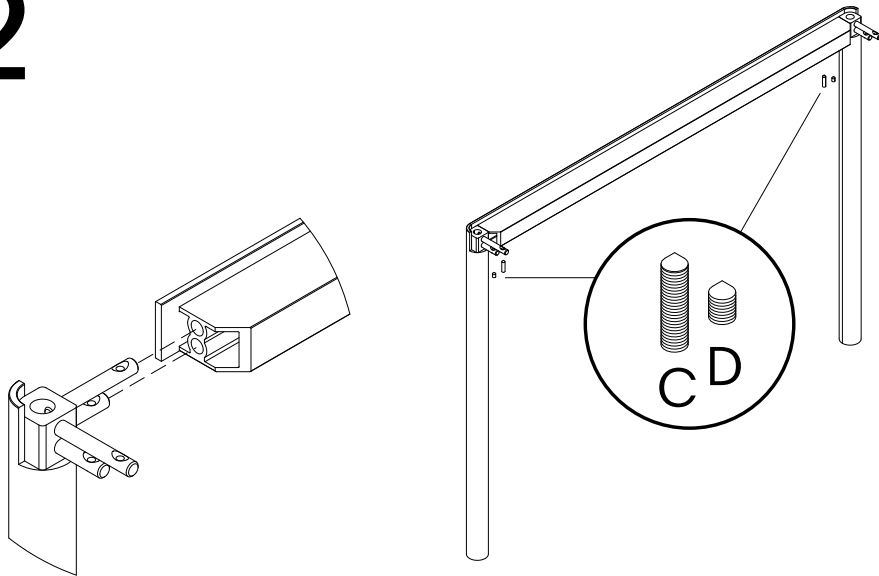


3

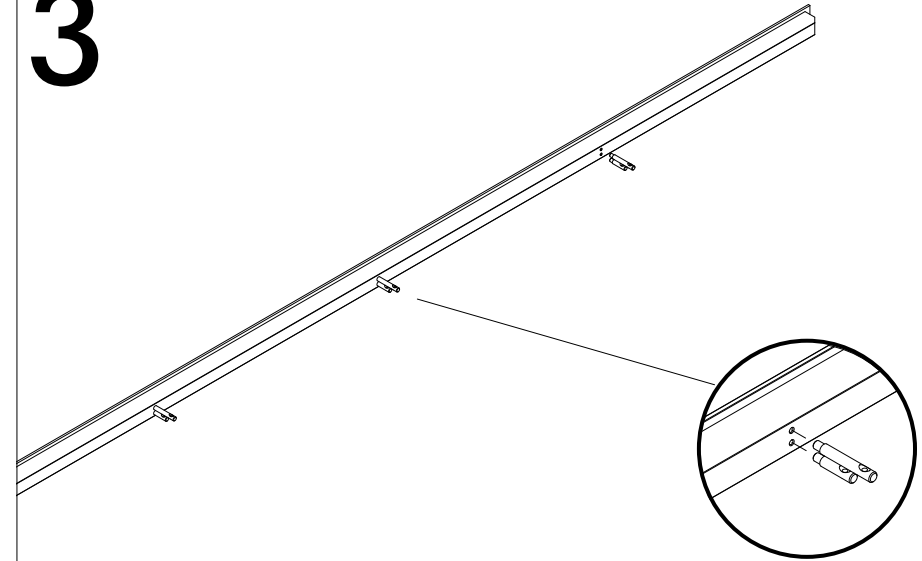


4

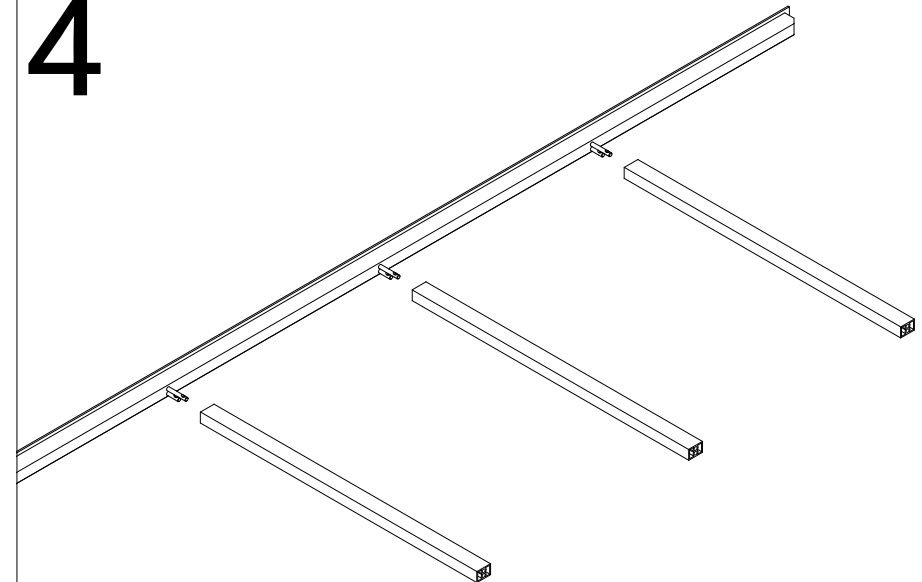


5

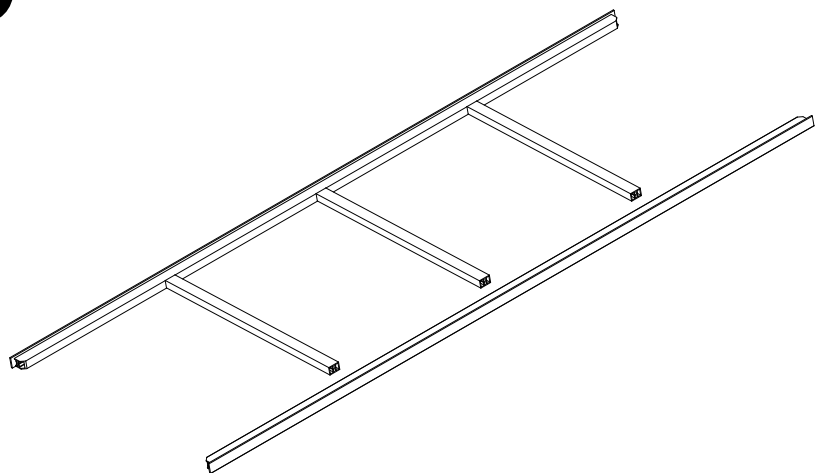

6

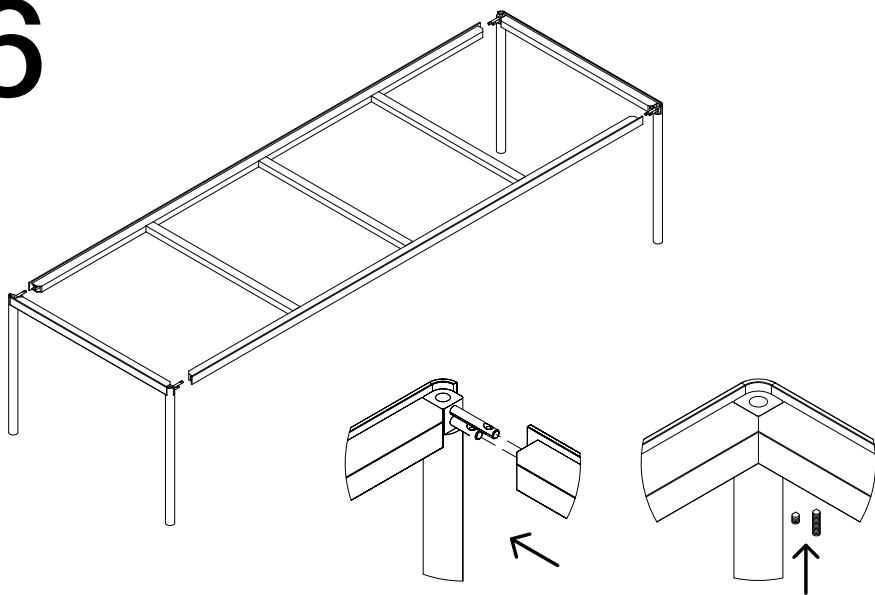



7

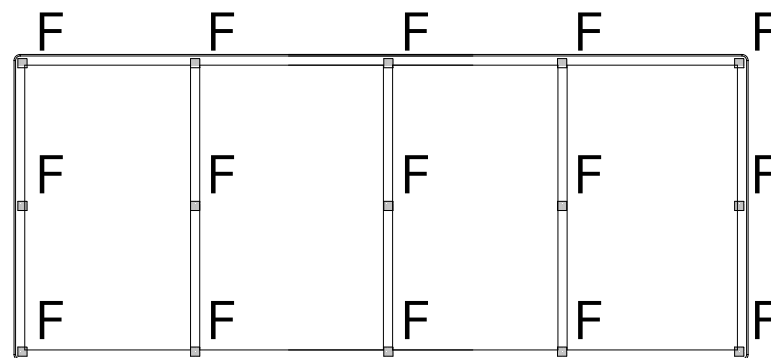



Place the rubber grommets along the whole perimeter of the frame.

8

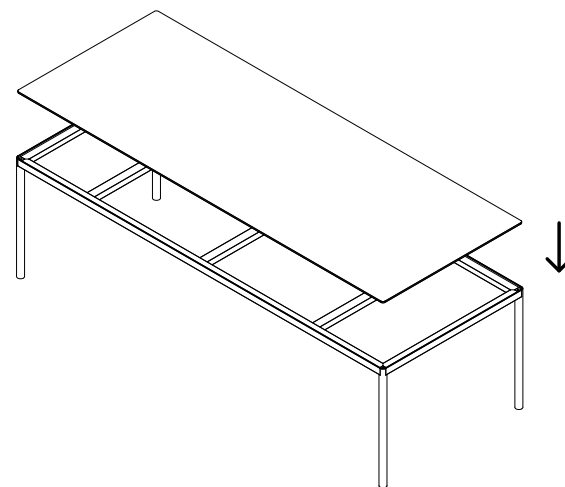


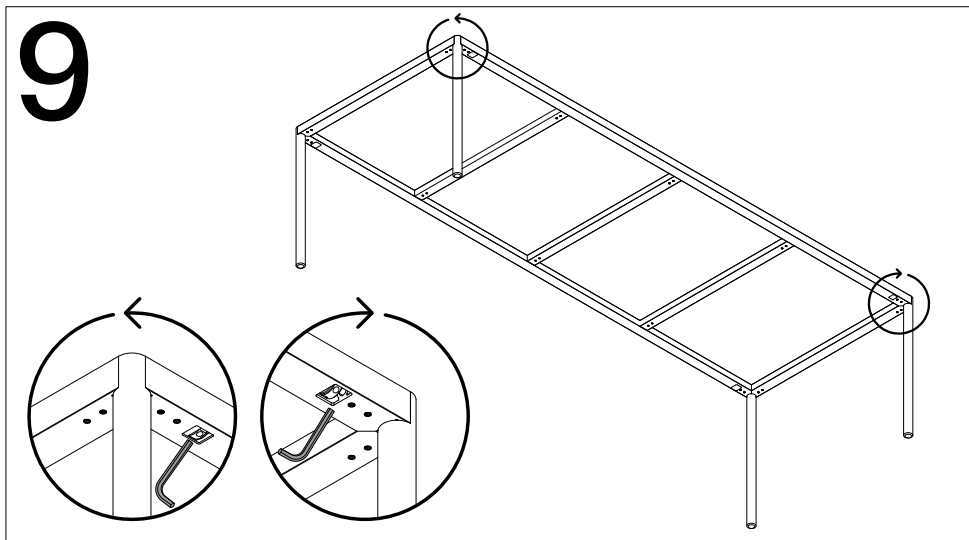

Tighten the rods of tension system using the wheel.

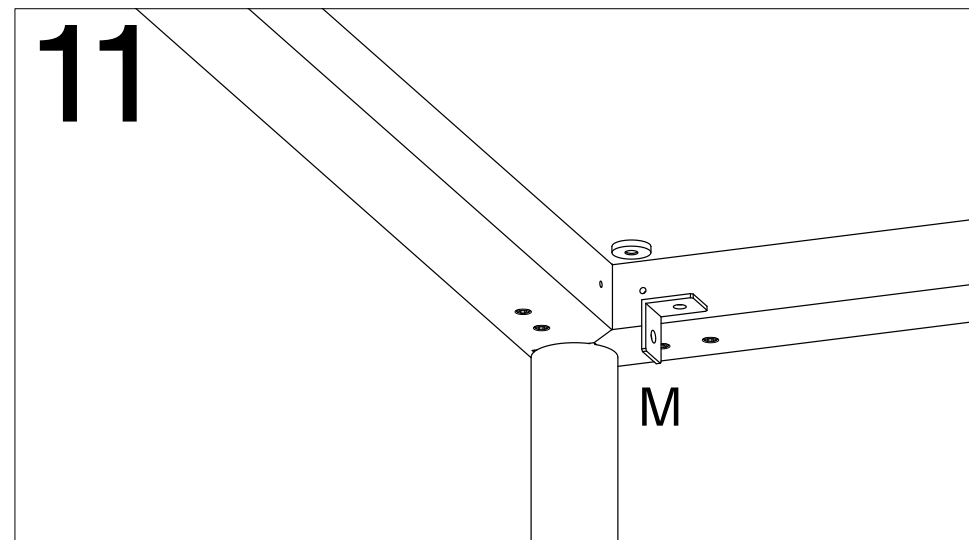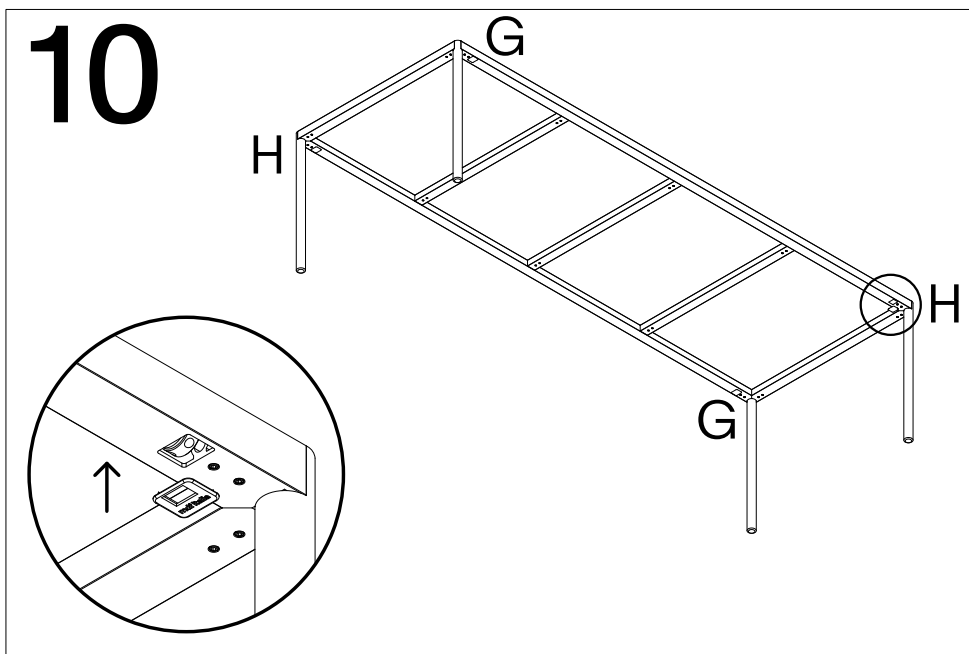

Place the bracket.

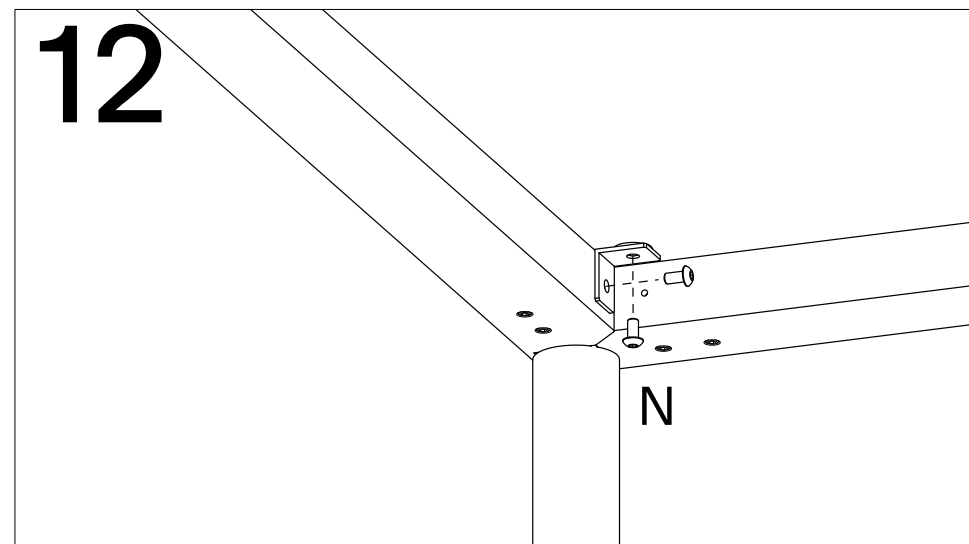

Fix it with M5×6 screws.

